



Flowline Starter with Edge V1 Stabilization Arm (FLCM-FLN-EGV1)



All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Flycam Flowline Starter with Edge V1 Stabilization Arm



2 x Velcro (1ft niche)



 
4 x Washers



2 x CSK Bolt
(Size: 3 x 8mm)



L-Type Allen keys
(Size: 2.5mm)



L-Type Allen Key
(Size: 2mm)



Storage Bag

Features:



Flycam Flowline Starter with Edge V1 Arm

Flowline Starter with Edge Setup

NOTE: It is recommended to attach the minimum required weight (3kg / 6.6lb) to pull down the balancing rope and ensure proper operation of your Flycam Flowline system.


Support Bar Adjustment

- Loosen the knob of the Flowline Edge.



- After loosening the knob, remove it and pull the rod of the Flowline Edge to open it.

Feature: The foldable design of the Flowline Edge makes it easier to store.

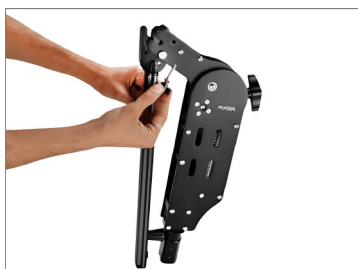

Mounting the Edge V1 Arm on the Flycam Flowline Starter Vest

- Properly attach the Edge to the Flowline vest.




- After opening the rod, insert the knob and properly tighten it, as shown in the image.

Feature: The tension adjustment knob matches your rig's weight, while the adaptable sliding knob adjusts the support rope to your unique filming needs.





- The Flowline Edge is fully assembled with the Stabilization Arm. The versatile belt system molds to fit all body types.

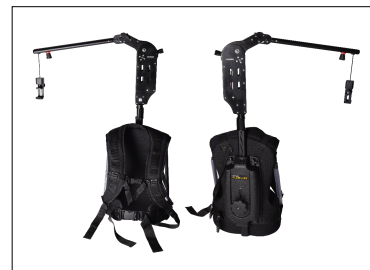


Support Bar Height Adjustment

- Loosen all four Adjustment Knobs provided on the back of the Support Jacket.
- Then adjust the height (upward/downward) of the support bar.

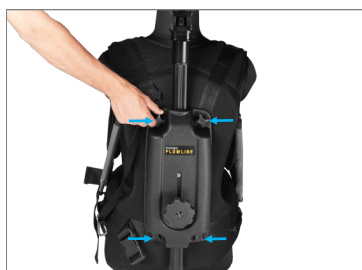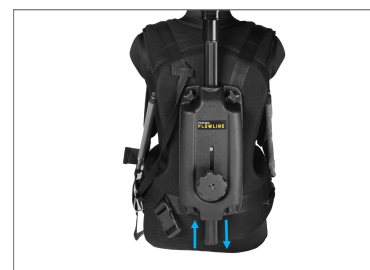

- Once the support bar is at the desired height, re-tighten all four Adjustment Knobs to secure it.

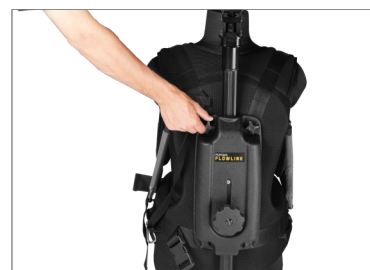

Height Adjustable Support Bar



Height Adjustable Knobs



- Put on the support jacket and tighten the buckles provided at the waist and chest.



- Then, adjust the jacket as per your convenience.



Camera Mounting

- Attach the Camera **(Not Included)** to the hook and tighten using the provided knob to ensure a slip-free connection.



- Your setup is ready to use.



Adjust Camera Setup Position

- Loosen the knob at the support bar to adjust the camera setup position.



Adjust Camera Setup Position



Spring Tension Adjustment

- Loosen the knob at the Edge V1 arm to adjust the spring tension.

Feature: The tension adjustment knob allows you to fine-tune the arm's spring tension to your rig's weight, while the adaptable sliding knob adjusts the support rope to meet your unique needs.



Low/ High Angle Shots



Capture Every Angle (180° Rotation)



**YOUR FLYCAM FLOWLINE STARTER WITH EDGE V1 STABILIZATION ARM
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.